



Adjusting the Laser Guidelines

Below are the instructions for adjusting the laser guidelines for your laser alignment systems from Laser Targeting Systems. Should you have any questions, please contact a Laser Specialist at (800) 426-9416 or 01-(760) 843-9586.

Forward & Back




By placing the one finger on the knob and one finger on the back of the position clamp, you are able to easily move the laser to the top and bottom of the pallet.

Left & Right



By placing the one finger on each side of the position clamp, you are able to easily move the laser to the left and right sides of the pallet.

Focusing the Laser

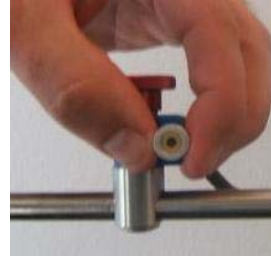

By turning the silver lens cover, you are able to focus the laser.

All images and text on this website are copyrighted by Laser Targeting Systems unless owned by another party.