

Holes are to be drilled on top of bar bracket (HOLE SIZE 3/8) holes should be centered to your pallet in locked position as in (FIG. 1A). Swivel alan bolt (FIG.2A) tighten so that bar is flush with back of pallet. Mount laser targeting systems to top of bar as illustrated in directions.

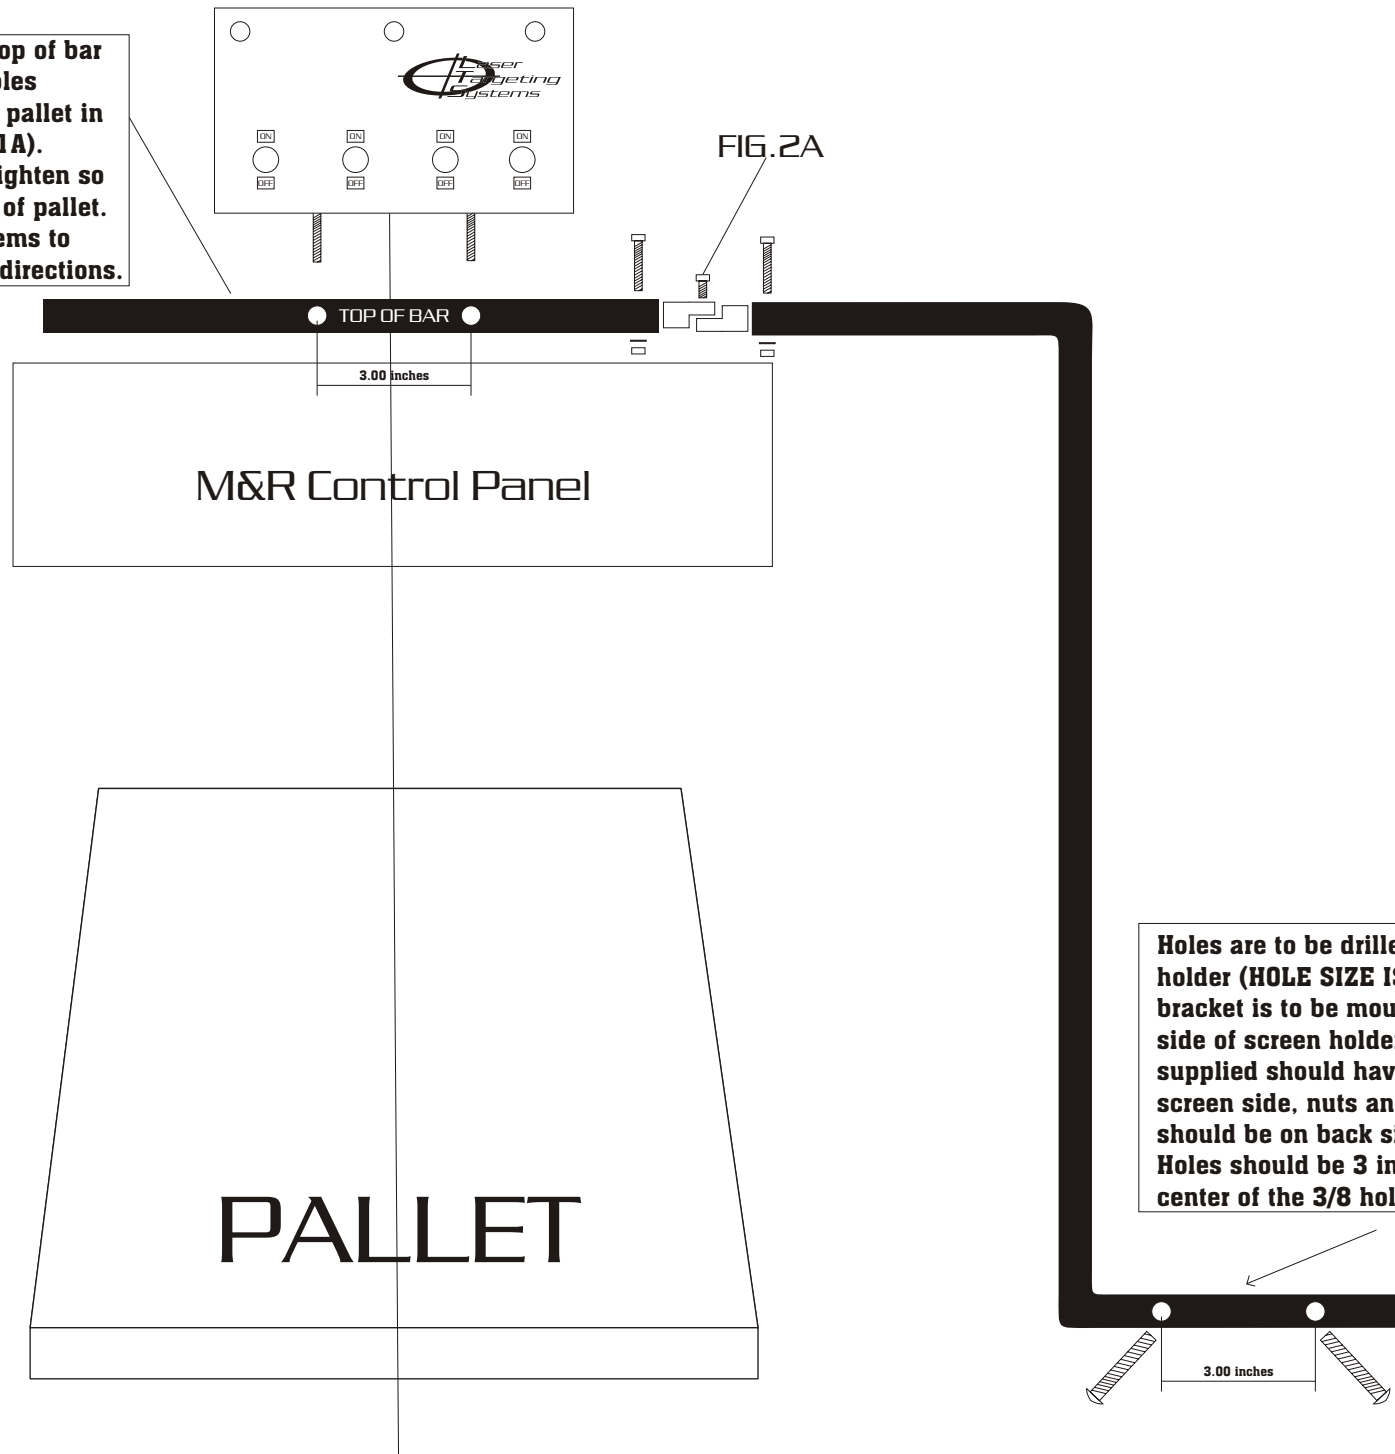


FIG. 1A

Holes are to be drilled in to screen holder (HOLE SIZE IS 3/8) Note the bracket is to be mounted to back side of screen holder. Pan bolts supplied should have flat side on screen side, nuts and washers should be on back side of bracket. Holes should be 3 inches from center of the 3/8 holes.